


N.E.W. Stock saddles have a medium gullet width and generally fit most horses of a standard conformation.

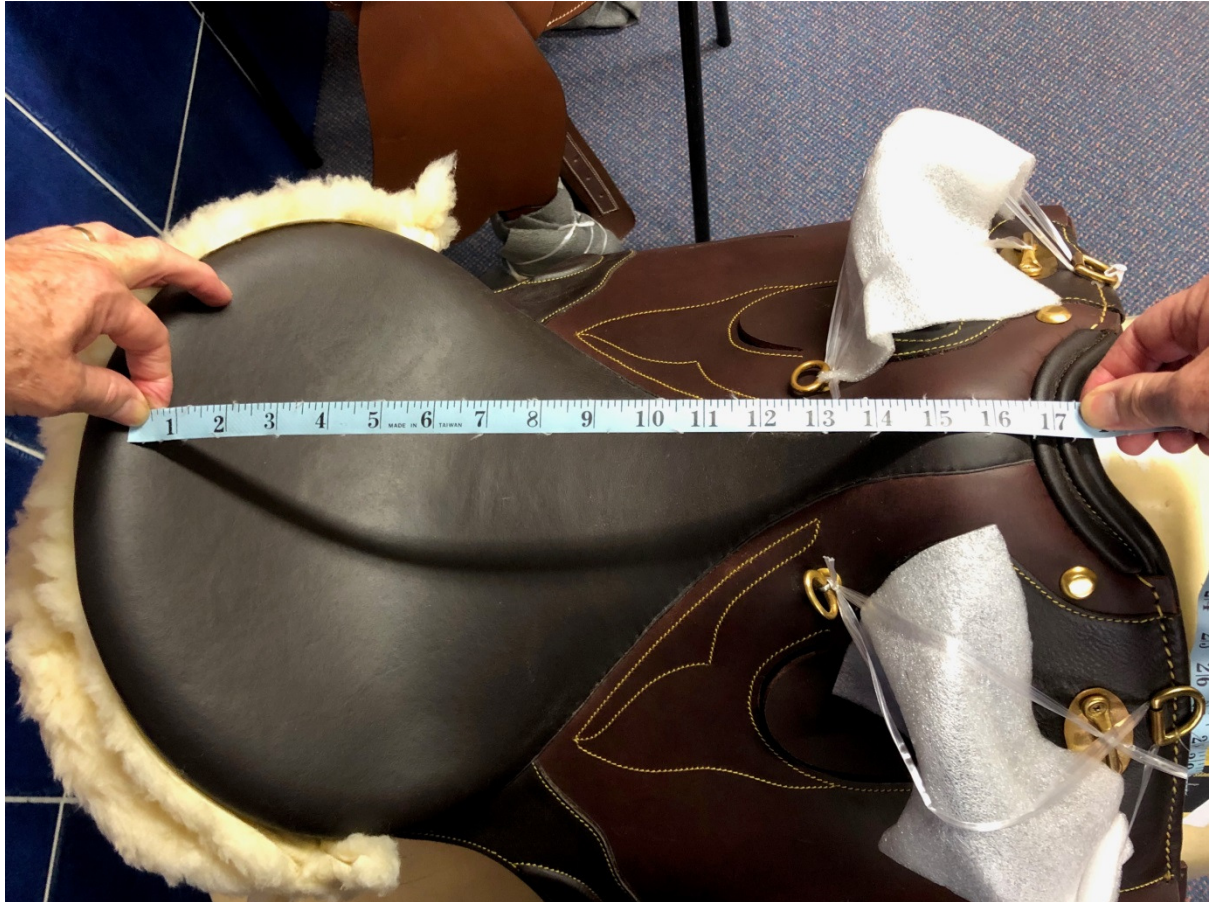

Traditionally Australian style stock saddles are measured right down the centre, from the leading edge of the Pomel (front of saddle) which is usually a line of stitches, to just inside the Cantle (back of saddle)

In the above picture we have measured a 17" Stock saddle.

That way you are basically measuring the internal tree of the stock saddle which determines its size.